

Before switching on....

- \* Install all vacuum tubes in their appropriate position (illustrated above)
- \* Set working voltage on the back of the power supply, see reverse.
- \* Plug in a AC power cord (not included)
- \* Turn the volume control knob to minimum (counter clockwise)
- \* Set output switch to HP position and plug in a headphone

Press the power button to switch ON the amplifier. The amber LED will blink and the tubes will glow gradually. This soft start process will run for approx. 20 seconds. The amplifier is ready to use when the LED stops blinking.

**CAUTION:** When in HP output mode, do not leave the amplifier ON for an extended period of time without a headphone connected.

## Quick Installation Guide (continues...)

For **AC100 to 120V** regions,  
set according to your AC  
outlet range.

**100** for 100 to 109V

**110** for 110 to 119V

**120** for 120 to 129V



For **AC220 to 240V** regions,  
set according to your AC  
outlet range.


**220** for 220 to 229V

**230** for 230 to 239V

**240** for 240 to 249V



To change the voltage switch, **be sure the unit is switched off**, insert a Philips flat screwdriver to the slot then turn to the number to the arrow.

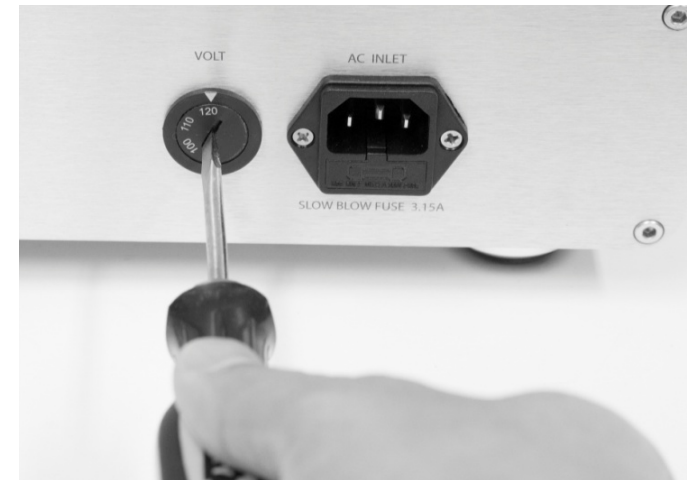

Included tubes

